

# Ice Machine Cleaning & Sanitizing

## HOSHIZAKI

KM-1100MAH, MWH, MRH KM-1340MAH, MWH, MRH KM-1601MRH/3

The ice maker must be cleaned & sanitized at least once a year.

# **Cleaning Prep:**

- Remove the Front Panel, move the control switch to OFF. After 3 min., move the switch to ICE, then replace the panel.
- After 3 min., remove the Front Panel, move the switch to OFF.
- 3 Remove all ice from the ice storage bin and/or dispenser.
- WARNING! IF ON DISPENSER, turn off the dispenser power supply after dispensing all the leftover ice.







**WARNING!** 

DO NOT leave icemaker unattended when panels are off








14

# Sanitizing:

- Fill the water tank
- CLOSE the cleaning valve
- Move control switch to ICE, replace the front panel
- After 3.5 minutes, remove the front panel
- · Move control switch to OFF
- Remove the front insulation 15 panel

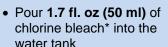


- · Replace the top, left, and insulation panels
- OPEN the cleaning valve
- \* Use bleach without additives. Additives cause excessive foaming, and reduces effectiveness of the cleaning.
- · Wait 1 minute to avoid excessive foaming



- Move control switch to WASH. replace the front panel
- After 45 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 18 panel
- Slide the cube guide to right
- Remove rubber cap & sleeve covering the overflow pipe
- Unscrew overflow pipe, drain water tank
- Replace the rubber cap, sleeve, cube guide & insulation panel

# Cleaning:

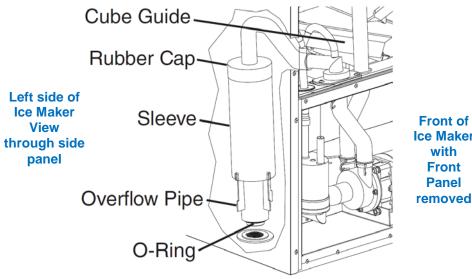

**Ice Maker** Front **Panel** 

**SWITCH** 

**OPEN** 

SWITCH

3.5

min.

4 Remove the Front Insulation Panel, slide the Cube Guide to right. Remove the Rubber Cap & Sleeve covering the Overflow Pipe. Unscrew the Overflow Pipe. Once the water tank has drained, replace all the items. CONTROL CONTROL

- 5 Refill water tank by moving the control switch to ICE. replace the Front Panel. After 3.5 minutes, remove Front Panel. move switch to OFF.
- 6 Remove the Front Insulation Panels. Pour 30 fl.oz (887 ml) of Hoshizaki Scale Away into the water tank. Replace the Front Insulation Panels. Turn the cleaning valve *left* until completely vertical (open).
- NOTICE! AVOID EXCESSIVE FOAMING, wait 1 minute before next step.
- Move the control switch to WASH, replace Front Panel.
- NOTICE! DO NOT leave the control switch on WASH for extended periods when water tank is empty. It will damage water pump seals.
- 8 After 30 minutes, remove Front Panel, then move the control switch to OFF.

CONTROL CONTROL SWITCH 30 min.

S continued on the back...

- Provided to right. Remove the Remove the Provided to right. Rubber Cap & Sleeve covering the Overflow Pipe. Unscrew the Overflow Pipe. Clean all items (See Step 10). Once the water tank has drained, replace all the items.
- 10 In bad water conditions, a more thorough cleaning may be required. Turn off power supply, clean all items in a solution of 5 oz. of Scale Away per gallon of warm water. Rinse and replace the cube guides, float switch, water supply tubes, spray tubes and spray guides. Turn on power supply. Otherwise, continue to step 11.



# **Cleaning Rinse:**

- 11 Turn the cleaning valve to the right until completely horizontal (closed). Move the control switch to ICE, replace Front Panel. After 3.5 minutes, remove the Front Panel, move switch to OFF.
- ♠ NOTICE! ICE MACHINE WILL NOT WORK. unless valve is completely closed.
- 12 Turn the cleaning valve to the <u>left</u> until completely vertical (open). Move the control switch to WASH, replace the Front Panel. After 5 minutes, remove the Front Panel, switch to OFF.
- 13 Remove the Front Insulation Panel, slide the Cube Guide to right. Remove the Rubber Cap & Sleeve covering the Overflow Pipe. Unscrew the Overflow Pipe. Once the water tank has drained, replace all the items.


Continue to Sanitation – Step 14 on front...

**OPEN cleaning valve:** 


the inside the evaporator

Turn left to open (vertical)

To allow cleaning solution flow to

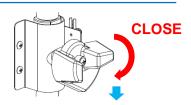



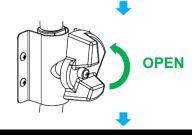

**CONTROL PANEL** WASH > 5 minutes > OFF

CLOSE cleaning valve:

making operation

Must be closed for normal ice

Turn right to close (horizontal)

**F** sanitizing continued...

#### **RINSE 1:** (Steps 19-21)

CLOSE cleaning valve



- Move control switch to ICE, replace the front panel
- After 3.5 minutes, remove the front panel
- Move control switch to OFF
- OPEN cleaning valve



- Move control switch to WASH, replace the front panel
- · After 5 minutes, remove the front panel
- Move control switch to OFF
- Remove the front insulation 21 panel



- · Slide the cube guide to right
- Remove rubber cap & sleeve covering the overflow pipe
- Unscrew overflow pipe, drain water tank
- Replace the rubber cap, sleeve, cube guide & insulation panel

**RINSE 2 & 3:** (Steps 22-28)



- Repeat 2x (Steps 19-21) for complete ice/food safety
- Clean the dispenser / storage bin liner with a neutral cleaner (dish soap)



- · Rinse thoroughly
- CLOSE the cleaning valve
- Move control switch to ICE
- Replace all panels



### NOTICE!

IF ICE MAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning

#### **DOWNLOAD COMPLETE INSTRUCTION MANUAL:**



hoshizakiamerica.com/support

Type in the model number of your ice machine (including dashes) to download manuals

#### **CLEANING SCHEDULE**

Scoop Water Filters

Dish soap, rinse well

Exterior

Check psi, change if req'd Dish soap & damp cloth

Bin Door/Top Kit

Warm water & clean cloth

Ice Maker/Bin

Follow these instructions

Water Supply Inlet

Clean inlet screen Inspect. Clean with brush

Condenser Water Hoses

Inspect. Replace if req'd • DAILY | • MONTHLY | • YEARLY

# WARNING!

DO NOT use ammonia type cleaners. Can cause damage to icemaker

**WEAR** liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals







#51003 | 7.22.2016 Tech Support: 1.800.233.1940